


# VISIONARY SOLUTIONS, INC.

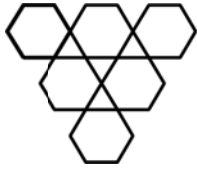

## D2X0L



### Quick Start Guide

D200L

D250L

©2015-2016 Visionary Solutions, Inc. All rights reserved.

# D2X0L Quick Start Guide

---

## Introduction

This document is intended to assist users in setup and use of their D200L and D250L POE Dante™ PacketAV® IO Devices.

## Equipment Required

1. D200L or D250L
2. POE Ethernet Switch (or POE injector for each device)
3. DHCP server to assign address to D2X0L
4. Ethernet cable
5. Dante™ Controller Software (Windows or Mac)  
<https://www.audinate.com/products/software/dante-controller>
6. A source creating a Dante™ audio flow.  
D200L  
PC or Mac with Dante™ Virtual Soundcard  
DSP with Dante™ output  
Mixing board with Dante™ output
7. A destination for a Dante™ audio flow  
D250L  
Others as above

## Step 1: Connect Hardware

1. Plug RJ-45 cable into the D2X0L and the network switch
2. Connect the inputs or outputs to professional line level audio
3. The Power LED should be green
4. The Dante™ LED should be green or blinking green
5. The Fault LED should be dark
6. Launch the Dante™ Controller Software
7. Locate the D2X0L in the Dante™ receivers or transmitters column
8. Select a Dante™ channel(s) audio and assign it to a channel(s)
9. Your input or output should be working with the selected audio flow.
10. Enjoy

## Important Information

The input and output level is nominally +4dBu. There is approximately 18dBu of headroom. Please see the D2X0L specification sheet for details.

## D2X0L Quick Start Guide

---